


Follow these steps to install your computer:


1 Remove the computer from the carton.

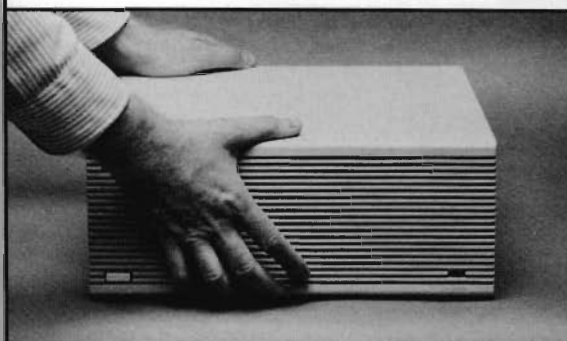


2 Place the computer on your desk.



3 Remove the long box from the carton.

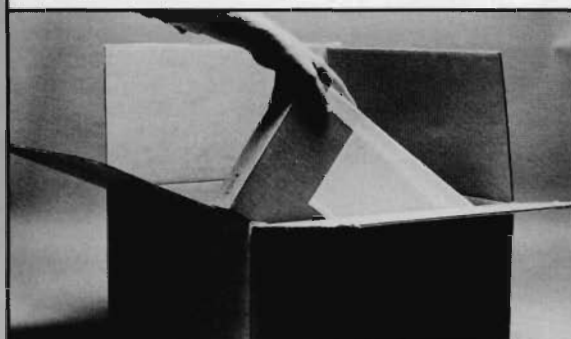

4 Open the long box and remove the power cord.

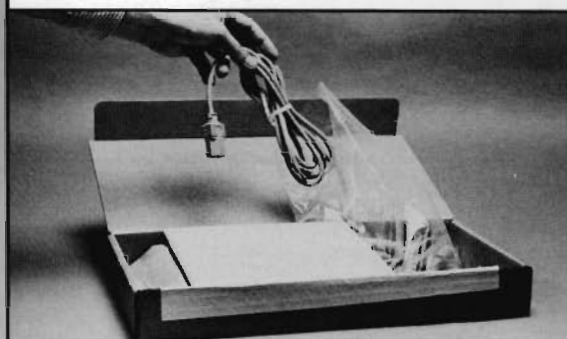

5 Compare the voltage setting to the power cord.


120V




240V



6 Check the voltage setting.

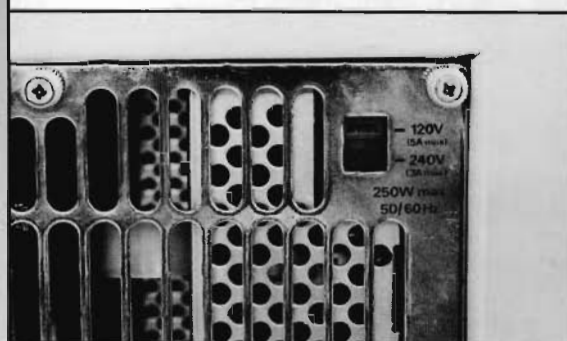

 
If you have any problems or questions, refer to the *Installation Reference*.




HP Computer Museum
www.hpmuseum.net

For research and education purposes only.

7 Connect power to the computer.

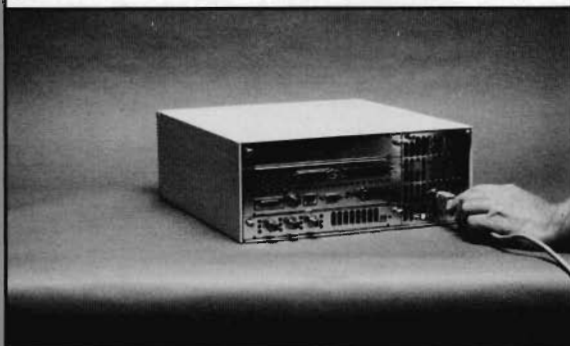


8 Find the video display monitor carton.

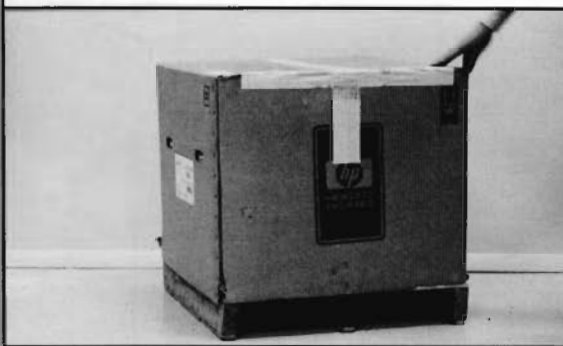


9 Unpack the monitor.




10 Check the voltage setting to be the same as the computer.

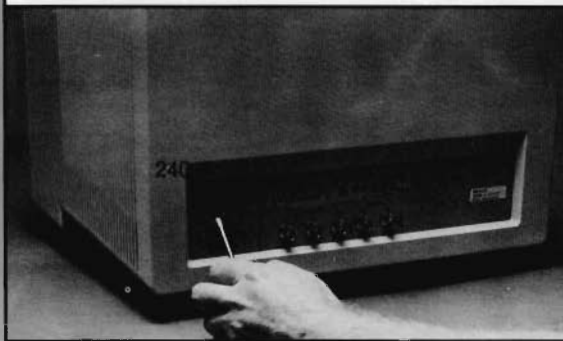


11 Find the video cable.

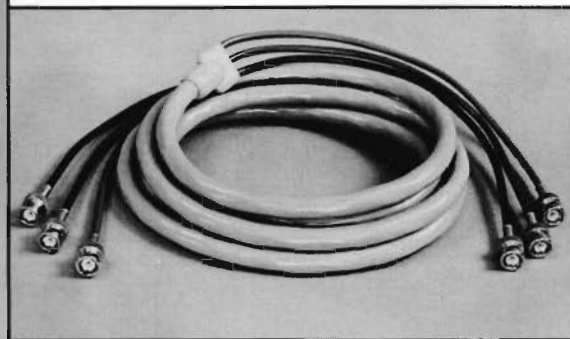


12 Connect it to the computer.

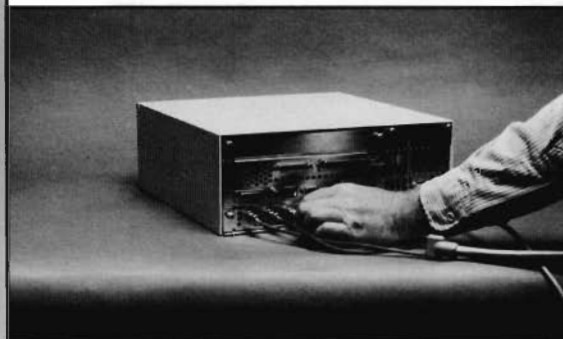

13 Connect it to the monitor.

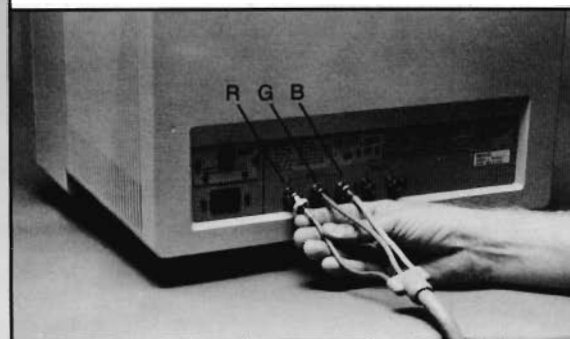


14 Find the speaker module.

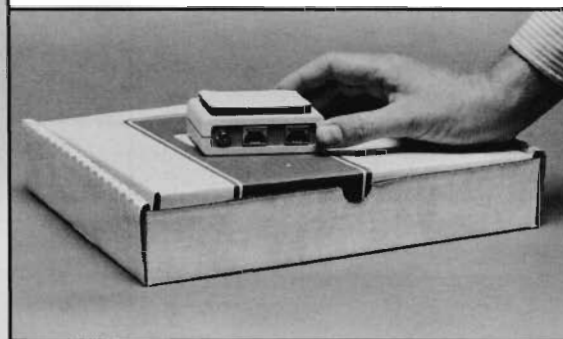


If you have any problems or questions, refer to the *Installation Reference*.


15 Place it near the monitor.

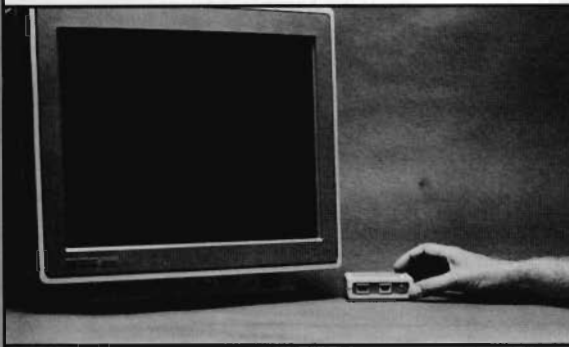


16 Find the audio cable.

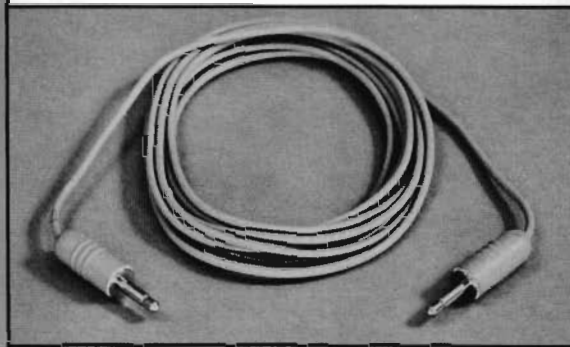


17 Connect it to the computer.

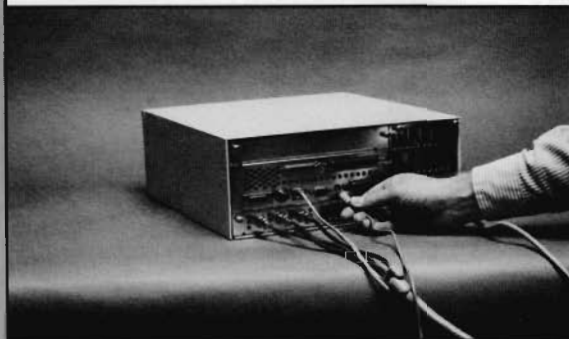


18 Connect it to the speaker module.

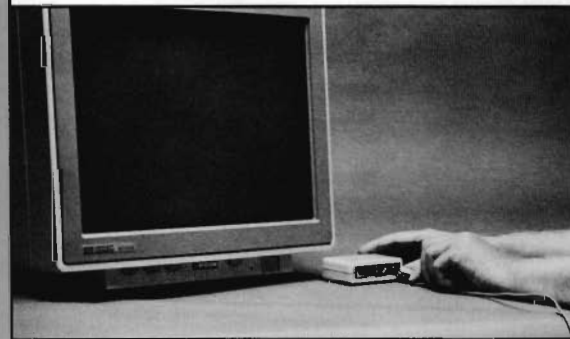


19 Find the HP-HIL cable.

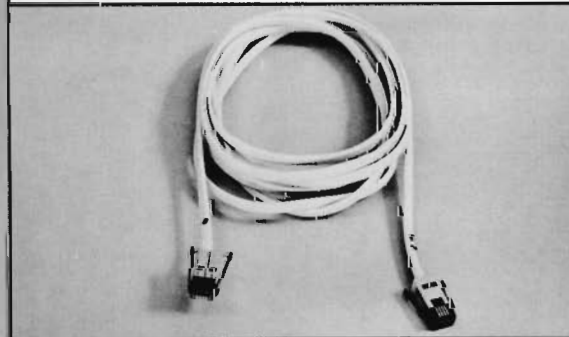

20 Find the two-dot end of the HP-HIL cable.

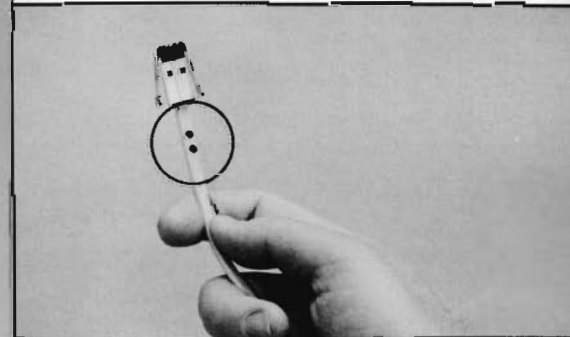

21 Connect it to the computer.

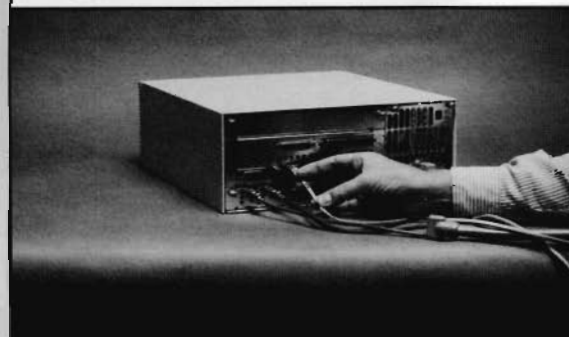


22 Connect the one-dot end to the speaker module.



If you have any problems or questions, refer to the *Installation Reference*.


23 Connect power to the monitor.

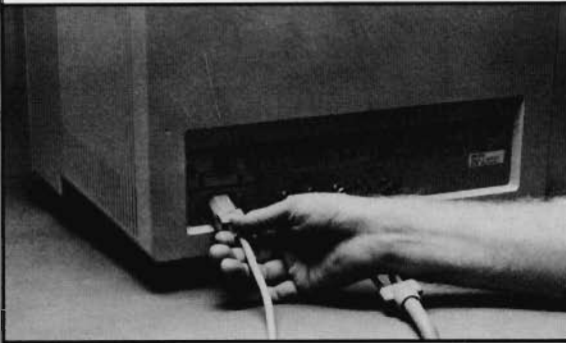


24 Turn the monitor on.




25 Find and unpack the keyboard.

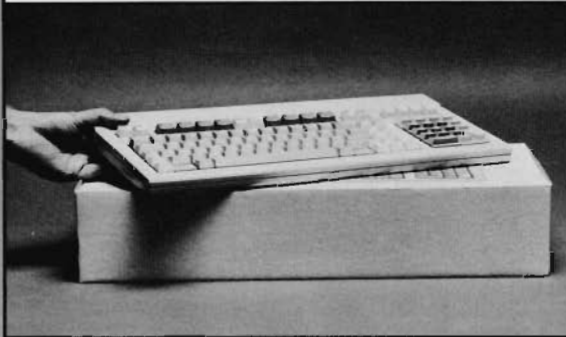

26 Find the keyboard cable.

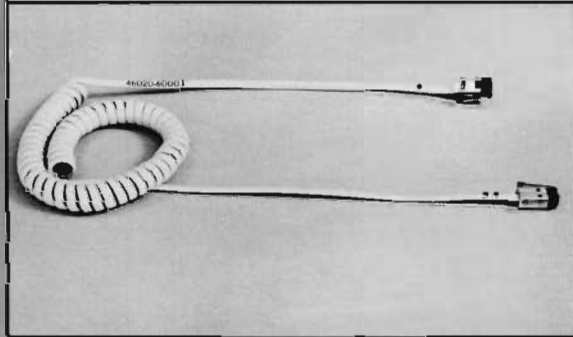


27 Locate the two-dot end of the keyboard cable.

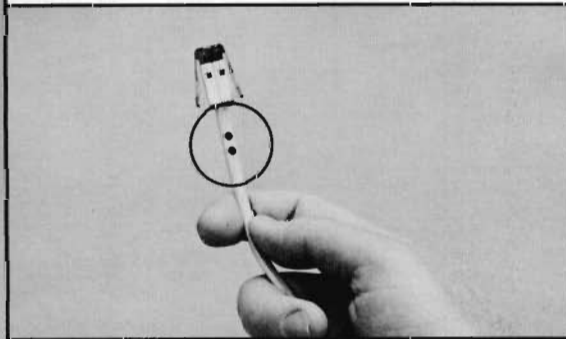


28 Connect it to the speaker module.



29 Connect the one-dot end to the keyboard.

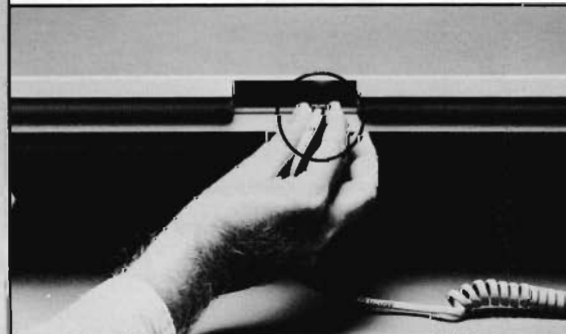

30 Turn the computer on.

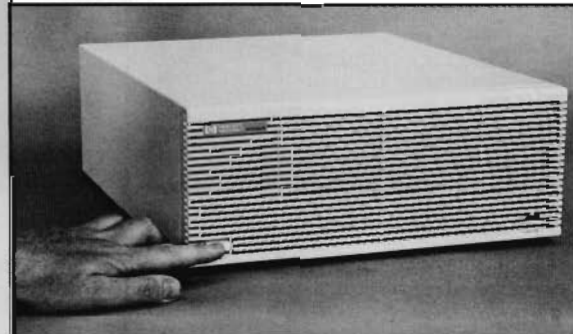

If you have any problems or questions, refer to the *Installation Reference*.

31 Compare the display to this picture:


```
Copyright 1989.  
Hewlett-Packard Company  
All Rights Reserved  
  
BOOTROM Rev D  
Bit-Mapped Display  
MC68030 Processor  
MC68882 Coprocessor  
HP-III Keyboard  
HP-1B  
DMA-00  
RAM xxxxxx Bytes  
HPWB44 (HS222) at 9  
HP95265 (SCSI S 32) at 14  
HP95265 (HS HP-IB) at 16  
HP95543 (LAD) at 21, 0000AAAAA  
HP Parallel at 23
```

SEARCHING FOR A SYSTEM (Press RETURN To Pause)
RESET To Power-Up

32 If the display is correct, you have installed your computer.



33 Refer to *Installing Peripherals* to install peripheral hardware.

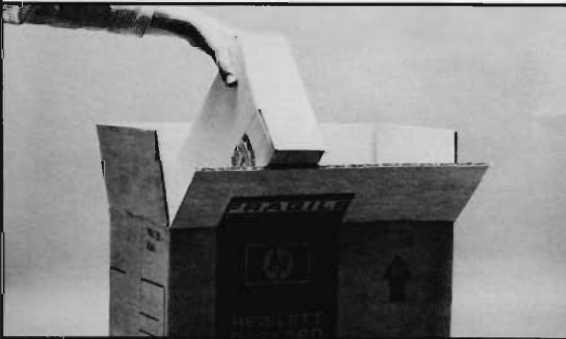

If you have any problems or questions, refer to the *Installation Reference*.

Hewlett-Packard Company • 3404 East Harmony Road • Fort Collins, Colorado 80525

HP Part Number
98560-90659

Microfiche No. 98560-99659
Printed in U.S.A. E1289



98560-90659