

SONY NEWS ROM monitor

ROM variable

ROM variable is

```
<Variable name > = <Value >
```

If there is no value for the variable

```
<Variable name > =
```

It is remembered by NVRAM in the form of. To actually set it, use the set command,

```
> set bootdev= scsi
```

Do like Running the set command without arguments will display all currently configured ROM variables and their values.

The special variables are as follows.

Variable name	type	Uses	Default value *
machine*	str	A string representing the main body series	news5000
model*	str	Body type of aircraft	NWS-5000
cputype*	str	A string that represents the type of CPU	r4000
conin	str	Console input device	
about	str	Console output device	
bitmap	str	Bitmap device	
network*	str	Network device	
dumpdev*	str	device to save core image	ethernet
debug*	bool	Debug mode on, off	
bootdev	str	Default boot device	scsi(0,0)
romrc	str	Command line that runs automatically after powering	

* Items marked with "*" in the variable name must not change their value. Type str takes a string on the value. Type bool means "variable set/not" but the value itself is irrelevant.

*The "default value" may not be true because it was the value that was originally set when I captured this guy. Sesame.



In the SONY NEWS manual, all defaults are written as "default", so I wrote so.

But I wonder if I have to get caught in a search engine. Chihara and anxiety.

[Back to original](#)